



**Elevator Equipment
Corporation**
CB-008

**Monitoring Sealed PVC System
with Inspection Port**

To inspect the Sealed PVC System on an EECO Jack Units, please follow the steps below.

- 1) Remove the plug from the Inspection Port located on the steel plate that attaches the Sealed PVC System to the Jack.
- 2) Attach a small piece of cloth or other absorbent material onto the hook at end of an Electrical Fish Tape.
- 3) Insert the tape into the Inspection Port and push the tape to the bottom of the PVC System.
- 4) Pull the tape out and inspect the cloth for liquids.
 - a) If water is present the PVC System is leaking.
 - b) If oil is present the Jack Unit is leaking.
- 5) Replace the plug using a non-hardening sealant.
- 6) Record and report your findings



Electrical Fish Tape