



MODEL NO	OIL LINE SIZE	INLET TYPE	TRIP FLOW RANGE
PRV-075G	.75"	GROOVED	2-26
PRV-075T		NPT	
PRV-100G	1"	GROOVED	27 - 45
PRV-100T		NPT	
PRV-150G	1.5"	GROOVED	46 - 110
PRV-150T		NPT	
PRV-200G	2"	GROOVED	111 - 208
PRV-200T		NPT	
PRV-250G	2.5"	GROOVED	209 - 318
PRV-250T		NPT	
PRV-300G	3"	GROOVED	319 - 546
PRV-300T		NPT	

The **Pipe Rupture Valve (PRV)** is a simple but effective way to quickly and smoothly stop a car should an overspeed of the elevator occur. The PRV is connected directly to the pressure line between the control valve and the jack. The supplied connections on the PRV make installation quick and easy. The PRV comes with either NPT or grooved connections. Trip flow range is GPM x 1.25.